



User's Manual

SUN-HO-H Series


Fiber Optic Heat Oven

English

*All the trademarks mentioned in this manual are registered property of Sun Telecom.
The right to interpret this manual is reserved by Sun Telecom.*

Sun Telecom's SUN-HO-H series fiber optic heat oven is used in heating up all kinds of optical fiber connectors, is suitable for fiber optic connector manufacturers. This Heat oven with liquid crystal display (LCD) and friendly interface. It can also accommodate 100pcs of ceramic ferrules or 40pcs of assembled connectors.

1. Panel description:

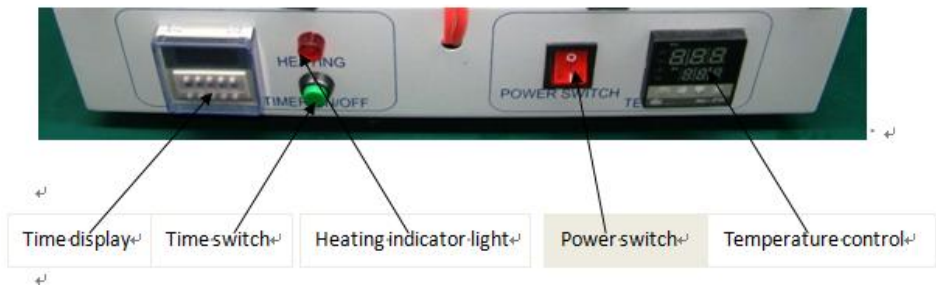

2. Using Guide

1. Connected single-phase power supply 220VAC, 110VAC, 5A.
2. Taking the power switch to the ON. The red light will be working.
3. Program setting:
 - To press the switch of SETUP, showing the correspondence control switch, after will setting the program which has 2 items setting, one is TIME, and the another one is TEMPERATURE.
 - **Temperature controlling:** It necessary the constant temperature. To press the switch of UP and DOWN to add and subtract the temperature which is convenience to up to the required temperature, then please press the OK switch to set into timing control. 100 ° c is the default temperature whose factory setting before out of the factory.
 - **Time Controlling:** while showing the time setting into the time control ,you can press the UP and DOWN switch to adjust the time which is the required the continuous time when the curing oven in the constant temperature. Please press the OK switch setting into the



operation process after adjust the required time. The time that the factory set before get into the market which is 30 minutes

- **Operating the process of solidity.** Please get the solidified fiber connectors into solidified jig and then put it into heating block. At last , put the dust guard on it.
- It will get into the process of solidify when you press the OK switch. The curing oven will begin to heat. When you adjust the time you require the timer will begin to work and the temperature will keep constant temperature until up to the specified time. As that time , the curing oven will stop to work ,after that ,a cycle of curing end.
- If you want to cure for once again , the time and temperature same as last time .Please put the fiber that has cured into the curing jig, and put it into the curing jig. To press the AGAIN that will get into the next cycle of curing.
- If you want to change the time and temperature , please go into SETUP switch which you can adjust the time and temperature any time.

3. Standard Accessories

Curing boards 2pcs, Power line 1pc

An important message from Sun Telecom

We guarantee that any information you supply will remain confidential.

By returning this card, you will automatically be notified about updates, modifications, and recalibration.

Warranty Registration Card

Serial Number: _____

Model Number: _____

Date of Purchase: _____

Company Name: _____

Company Address: _____

TEL: _____ FAX: _____

E-mail: _____

Note: Please fax this note within one month from the date of receiving units.

YOUR OPINION:

Do you have any comments on the quality of this product or the service from us?

SHANGHAI SUN TELECOMMUNICATION CO., LTD.

Building No.145 Lane 666, Xianing Rd.

Jinshan Industrial Zone, Jinshan District

ShangHai, China 201506

Tel: +86 21 60138638 Fax: +86 21 60138635-401

E-mail: ics@suntelecom.cn

<http://www.suntelecom.cn>

